




## ***IAG Fender Shrouds*** ***For 2015-2021 Subaru WRX/STI***

**IAG Fender Shrouds for 2015-2021 Subaru WRX/STI**  
**Part Number: IAG-ACC-2601**

**Congratulations on the purchase of your Fender Shrouds, and thank you for choosing IAG Performance! These instructions are intended for users with basic mechanical skills. Professional installation is not required.**

### **Product includes:**

- 1 (X2) Fender Shroud**
- 2 (X2) Color Plate**
- 3 (X6) 2.5mm Allen (Short)**
- 4 (X6) Rivet Nut**
- 5 (X2) Strut Spacer**
- 6 (X6) 2.5mm Allen (Long)**

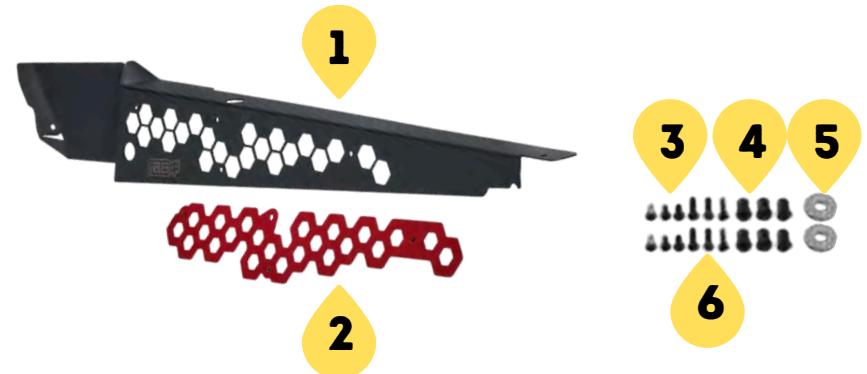

### **Tools Needed:**

- 2.5mm Allen Wrench**
- 12mm Wrench**
- Pocket Screw Driver**
- Small Pry Tool**



**Step 1:** Using a small pry tool, remove the push clips from the factory fender cover. Remove the fender cover.



**Step 2:** Support the hood with a hood prop.




**Step 3:** Using a pocket screwdriver, pry the hood strut clip up. Remove the hood strut from the ball, and set strut aside.




**Step 4:** Using a 12mm wrench, remove the hood strut ball.




**Step 5:** Install the provided Strut Spacer onto the hood strut ball, and reinstall.

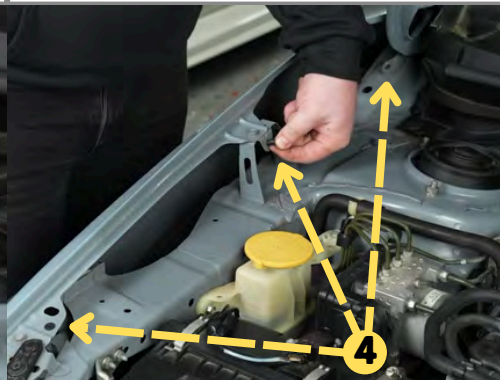

**Step 6:** Install the Rivet Nuts into the 3 shown locations.

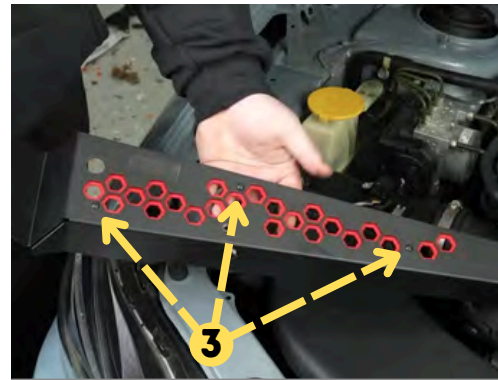

**Step 7:** Using three short 2.5mm Allen bolts, install Color Plate to the Shroud. Center the plate then tighten hardware.

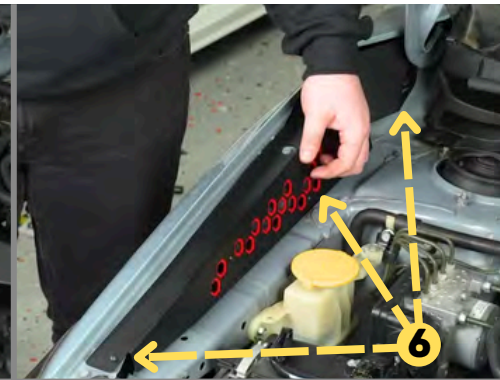

**Step 8:** Using three long 2.5mm Allen bolts, install Shroud onto fender. Apply pressure to Shroud and tighten bolts.



**Step 9:** Reinstall the hood strut, ensure that the hood strut clip is seated.



**Step 10:** Repeat process for other side.



If you have any questions about the installation or product please contact [support@iagperformance.com](mailto:support@iagperformance.com) or call 410-840-3555